




# ASSEMBLY INSTRUCTIONS

**1** Twist off the lock from the braces.

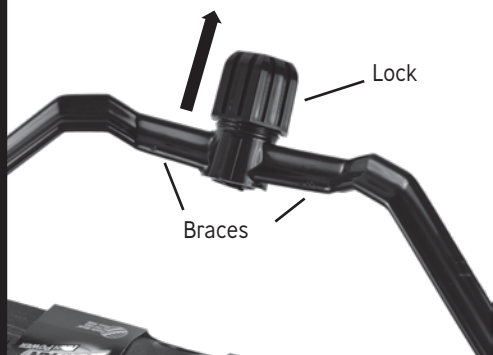

**2** Slide the handle in between both braces and into the broom block. Twist handle into broom block.



**3** After screwing in the handle, line up both braces together on the handle.



**4** Slide the lock down the handle.



**5** Screw the lock onto the braces.



**6** Remove the packaging. Ready to sweep.

